
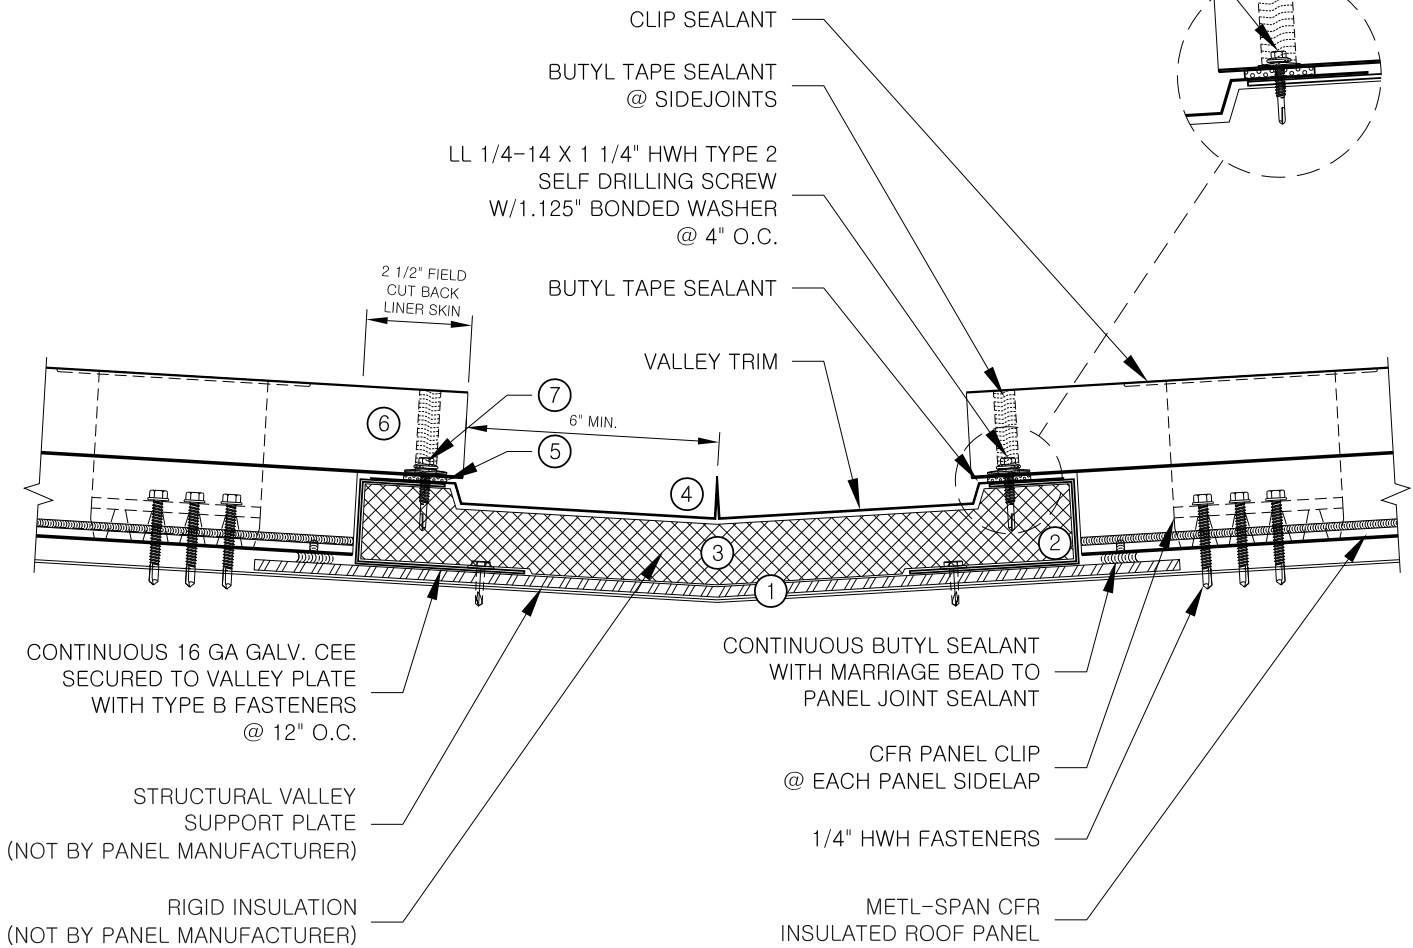


LL 1/4-14 X 1 1/4" HWH TYPE 2
SELF DRILLING SCREW
W/1.125" BONDED WASHER
@ EVERY HIGH & LOW MESA

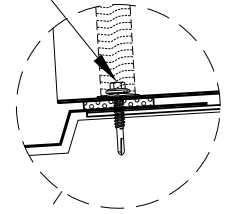

SEQUENCE OF INSTALLATION:

- ① STRUCTURAL VALLEY SUPPORT PLATE
- ② CEE SHAPED SECURED TO VALLEY PLATE
- ③ FILL VOID W/RIGID INSULATION
- ④ INSTALL VALLEY TRIM
- ⑤ APPLY SEALANT TAPE
- ⑥ FIELD CUT ROOF PANELS. REMOVE CUT BACK
- ⑦ FASTEN ASSEMBLY

NOTE: NOT FOR DORMER CONDITIONS -
CONTACT METL-SPAN FOR MORE INFORMATION